


KRISTINA DAM
Studio

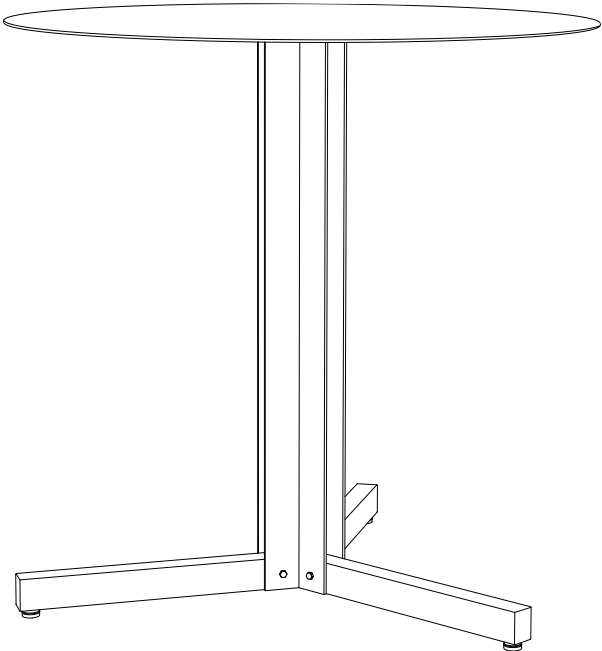

SPLIT CAFE TABLE
Brushed Stainless Steel
Ø74 x H72 cm

3 x Adjustable screw feet

3 x Felt pads


6 x Threaded poles

12 x Cap nuts M6




Tool: Socket wrench/ Bolt nut wrench is not included!

1.

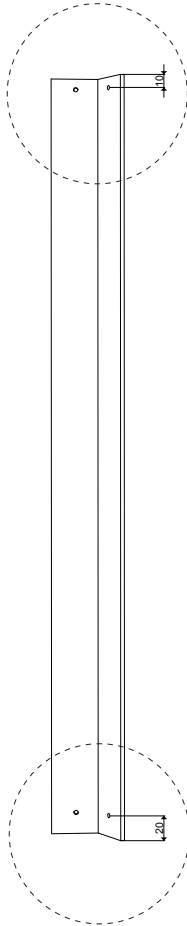


Please note: the holes in the leg are not placed at equal distances from each end. The upper hole sits 1 cm from the top, and the lower hole sits 2 cm from the bottom. Make sure the leg is oriented correctly before assembly – 1 cm end up, 2 cm end down.

2.

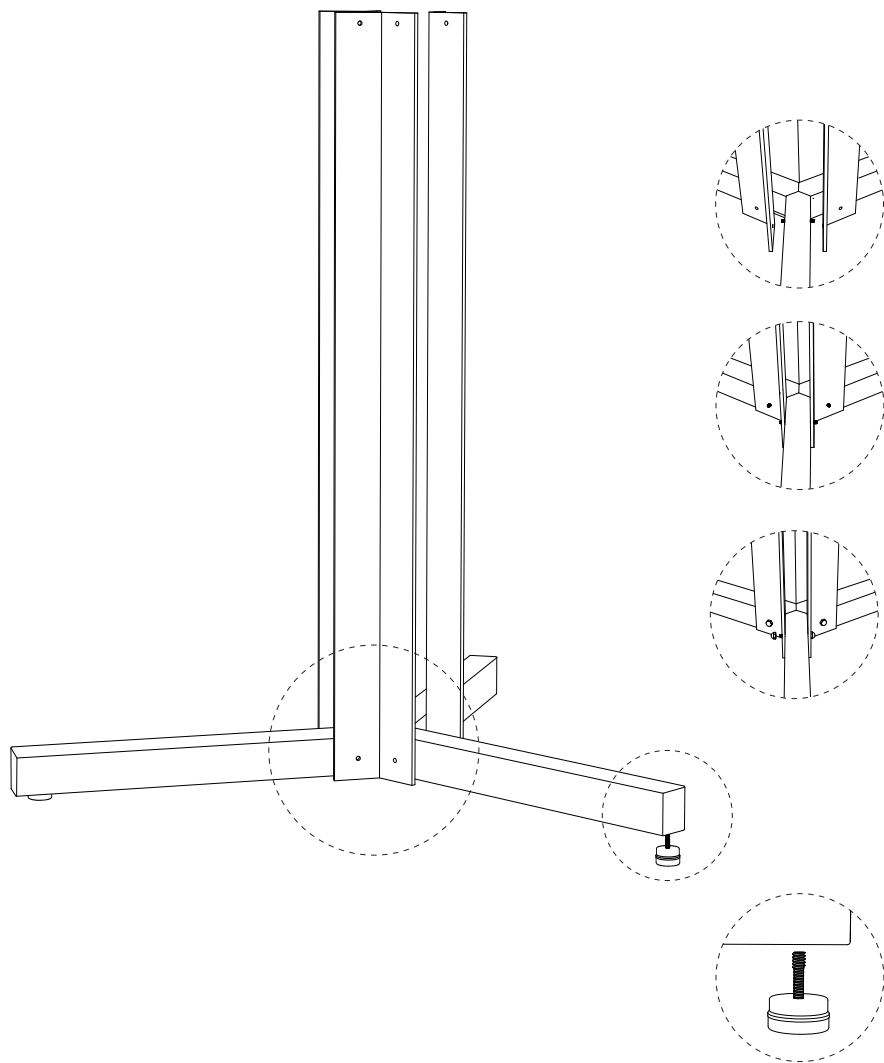

1. Attach the adjustable screw feet or felt pads to the underside of the table foot.
2. Insert the threaded rod into the hole in the table foot. Position the leg so the rod passes through the lower hole, with the 2 cm end facing down toward the foot.
3. Secure the leg to the foot by tightening a cap nut M6 onto each end of the threaded rod.
4. Repeat steps 2–3 for each remaining leg.

3.

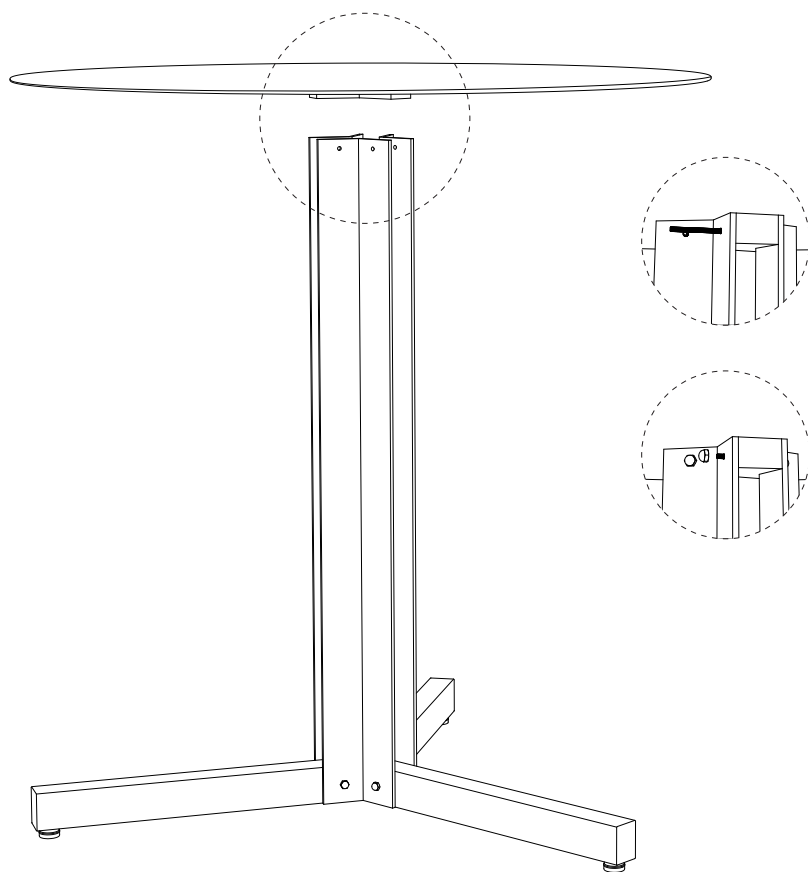

1. Place the tabletop on top of the legs. Ensure that the triangle on the tabletop is positioned inside the table legs.
2. Insert the threaded rod into the hole in the table legs so it passes through both the leg and the triangle.
3. Attach the cap nuts to both ends of the threaded rod and tighten securely.
4. Repeat steps 2-3 for each remaining table leg.